

## TL-150 Power Series Reporting Codes

Description	SIA Event
Zone Alarms	UA-XXX
Zone Alarm Restorals	UH-XXX
[F] Alarm	FA-000
[A] Alarm	MA-000
[P] Alarm	PA-000
[F] Alarm Restoral	FH-000
[A] Alarm Restoral	MH-000
[P] Alarm Restoral	PH-000
2-wire Smoke Alarm	FA-000
2-wire Smoke Alarm Restoral	FH-000
AC Trouble	AT-000
AC Trouble Restore	AR-000
Duress Alarm	HA-000
Fire Trouble Alarm	FT-000
Fire Trouble Alarm Restoral	FJ-000
Low Battery Trouble	YT-000
Low Battery Trouble Restore	YR-000
Bell Circuit Trouble	YH-000
Bell Circuit Trouble Restore	YA-000
General Supervisory Trouble	ET-000
General Supervisory Trouble Restore	ER-000
General System Trouble	YX-000
General System Trouble Restore	YZ-000
Opening After Alarm	OR-000
Partial Closing	CF-000
TLM Trouble (line number)	LT-XXX
TLM Trouble Restore (line number)	LR-XXX
Periodic Test	RP-000
Periodic Test with Trouble	RY-000
Recent Closing	CR-000
Expansion Module Supervisory Trouble	UA-000
Expansion Module Supervisory Restore	UH-000
Zone Tamper	TA-XXX
Zone Tamper Restorals	TR-XXX
Zone Troubles	UT-XXX
Zone Trouble Restorals	UJ-XXX
General System Tamper	ES-000
General System Tamper Restoral	EJ-000
FTC Restoral	YK-000